

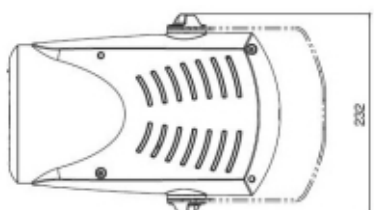


Internal floodlights

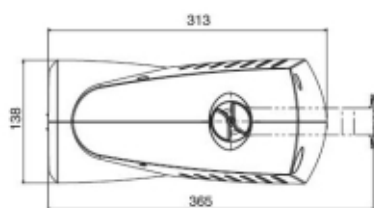

NICE TS

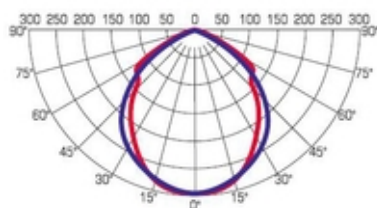

Variants

W				
300W	QT-DE 12 /R7s/	2,00		CL400001.115
300W	QT-DE 12 /R7s/	2,00		CL400002.115
300W	QT-DE 12 /R7s/	2,00		CL400003.115
70W	HIT-DE /RX7s/	3,20		CL400221.170
70W	HIT-DE /RX7s/	3,20		CL400222.170
70W	HIT-DE /RX7s/	3,20		CL400223.170
150W	HIT-DE /RX7s-24/	4,00		CL400221.115
150W	HIT-DE /RX7s-24/	4,00		CL400222.115
150W	HIT-DE /RX7s-24/	4,00		CL400223.115

Accessories

Electrical adapter (6A)



0,07		IV7601-00-W31
0,07		IV7601-00-W30
0,07		IV7601-00-W20



Mechanical adapter

In order to install NICE on a track it is necessary to order set of adaptors (electrical and mechanical).

0,08		IV7625-00-31
0,08		IV7625-00-30



Wall joint

0,14		CL940001.001
0,14		CL940002.001
0,14		CL940003.001

Antiglare shutter



0,20		CL940001.002
0,20		CL940002.002
0,20		CL940003.002

suspension

0,20		CL940001.003
0,20		CL940002.003
0,20		CL940003.003